


INCLUDED



ASSEMBLY

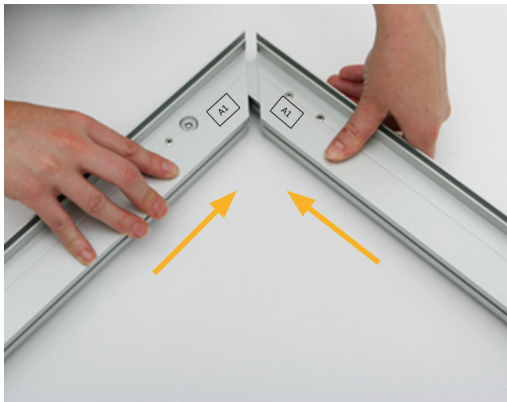

STEP 1


Stage the top, bottom and side pieces of the frame using the labeled ends to match at the corners. Push each corner together to form a tight fit.



STEP 2

Use the included wrench to tighten the integrated Tension Lock™ at each corner. Locks will engage with just a quarter-turn of the wrench.

DISPLAY

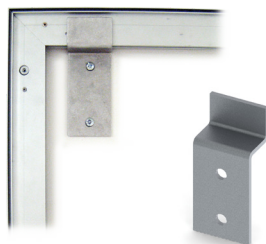

Z Cleats for Wall Mounting

Mount Z Cleats at the wall location desired, flush against the wall and with the ledge on the upper end. Place frame over the cleat ledges so the frame is securely held.

Baseplate for Floorstanding

Create baseplate assembly by inserting the stabilizing bolt from the bottom side of the plate and tightening with the flathead screw. With your frame lying flat on its reverse side, attach the baseplate by pushing the bottom edge of the frame over the bolt and securing with the wing nut. After standing, adjust as needed for maximum stability.



Eyebolts for Hanging

Insert the eyebolts into the threaded riv nuts along the top edge of the panel, screwing the eyebolts down to maximum depth.

