





INCLUDED



5 Corner Brackets



Wall Hanging Brackets

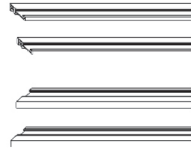


Frame

Hanging brackets are recommended on all sides of the frame.


Flat-head screwdriver required for assembly, not included.

ASSEMBLY

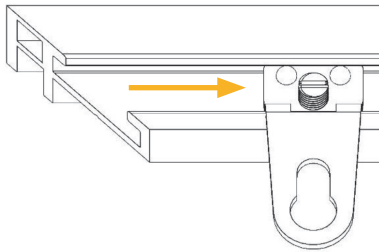


STEP 1

In each frame side, insert the wall hanging brackets. Move them away from the corner. Do not tighten.

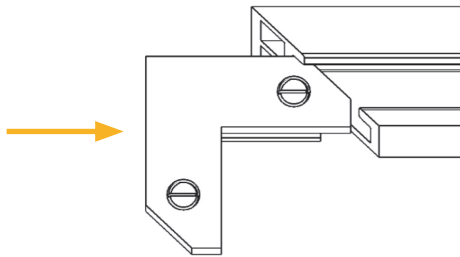


STEP 2

Insert corner bracket into the back channel of one frame piece.

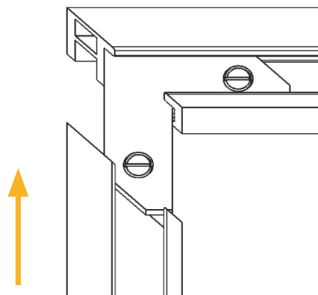

STEP 3

Slide the adjacent frame on the corner bracket.

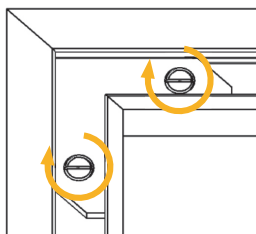

STEP 4

Tighten set screws with a screwdriver. Repeat for remaining corners and then adjust and tighten set screws for wall hanging brackets. Hanging brackets should be evenly spaced on each side of the frame.